

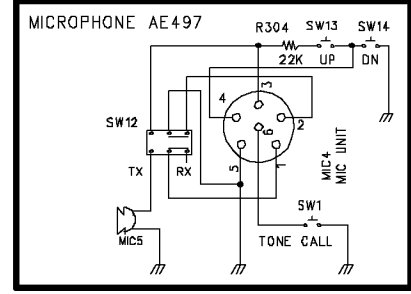





| MODE SETTING |             | MODE SETTING |                |
|--------------|-------------|--------------|----------------|
| #1           | 0 EXTENSION | #1           | 0 SSB ON       |
| #1           | 1 STANDARD  | #1           | 1 SSB OFF      |
| #1           | 2 MASTER    | #1           | 2 RPT. 80% SW  |
| #1           | 3 BASTER    | #1           | 3 RPT. 15% SW  |
| #1           | 4 FM ONLY   | #1           | 4 CB ENABLE    |
| #1           | 5 FM ONLY   | #1           | 5 HAN ONLY     |
| #1           | 6 FM ONLY   | #1           | 6 NORMAL       |
| #1           | 7 FM ONLY   | #1           | 7 27.075 START |

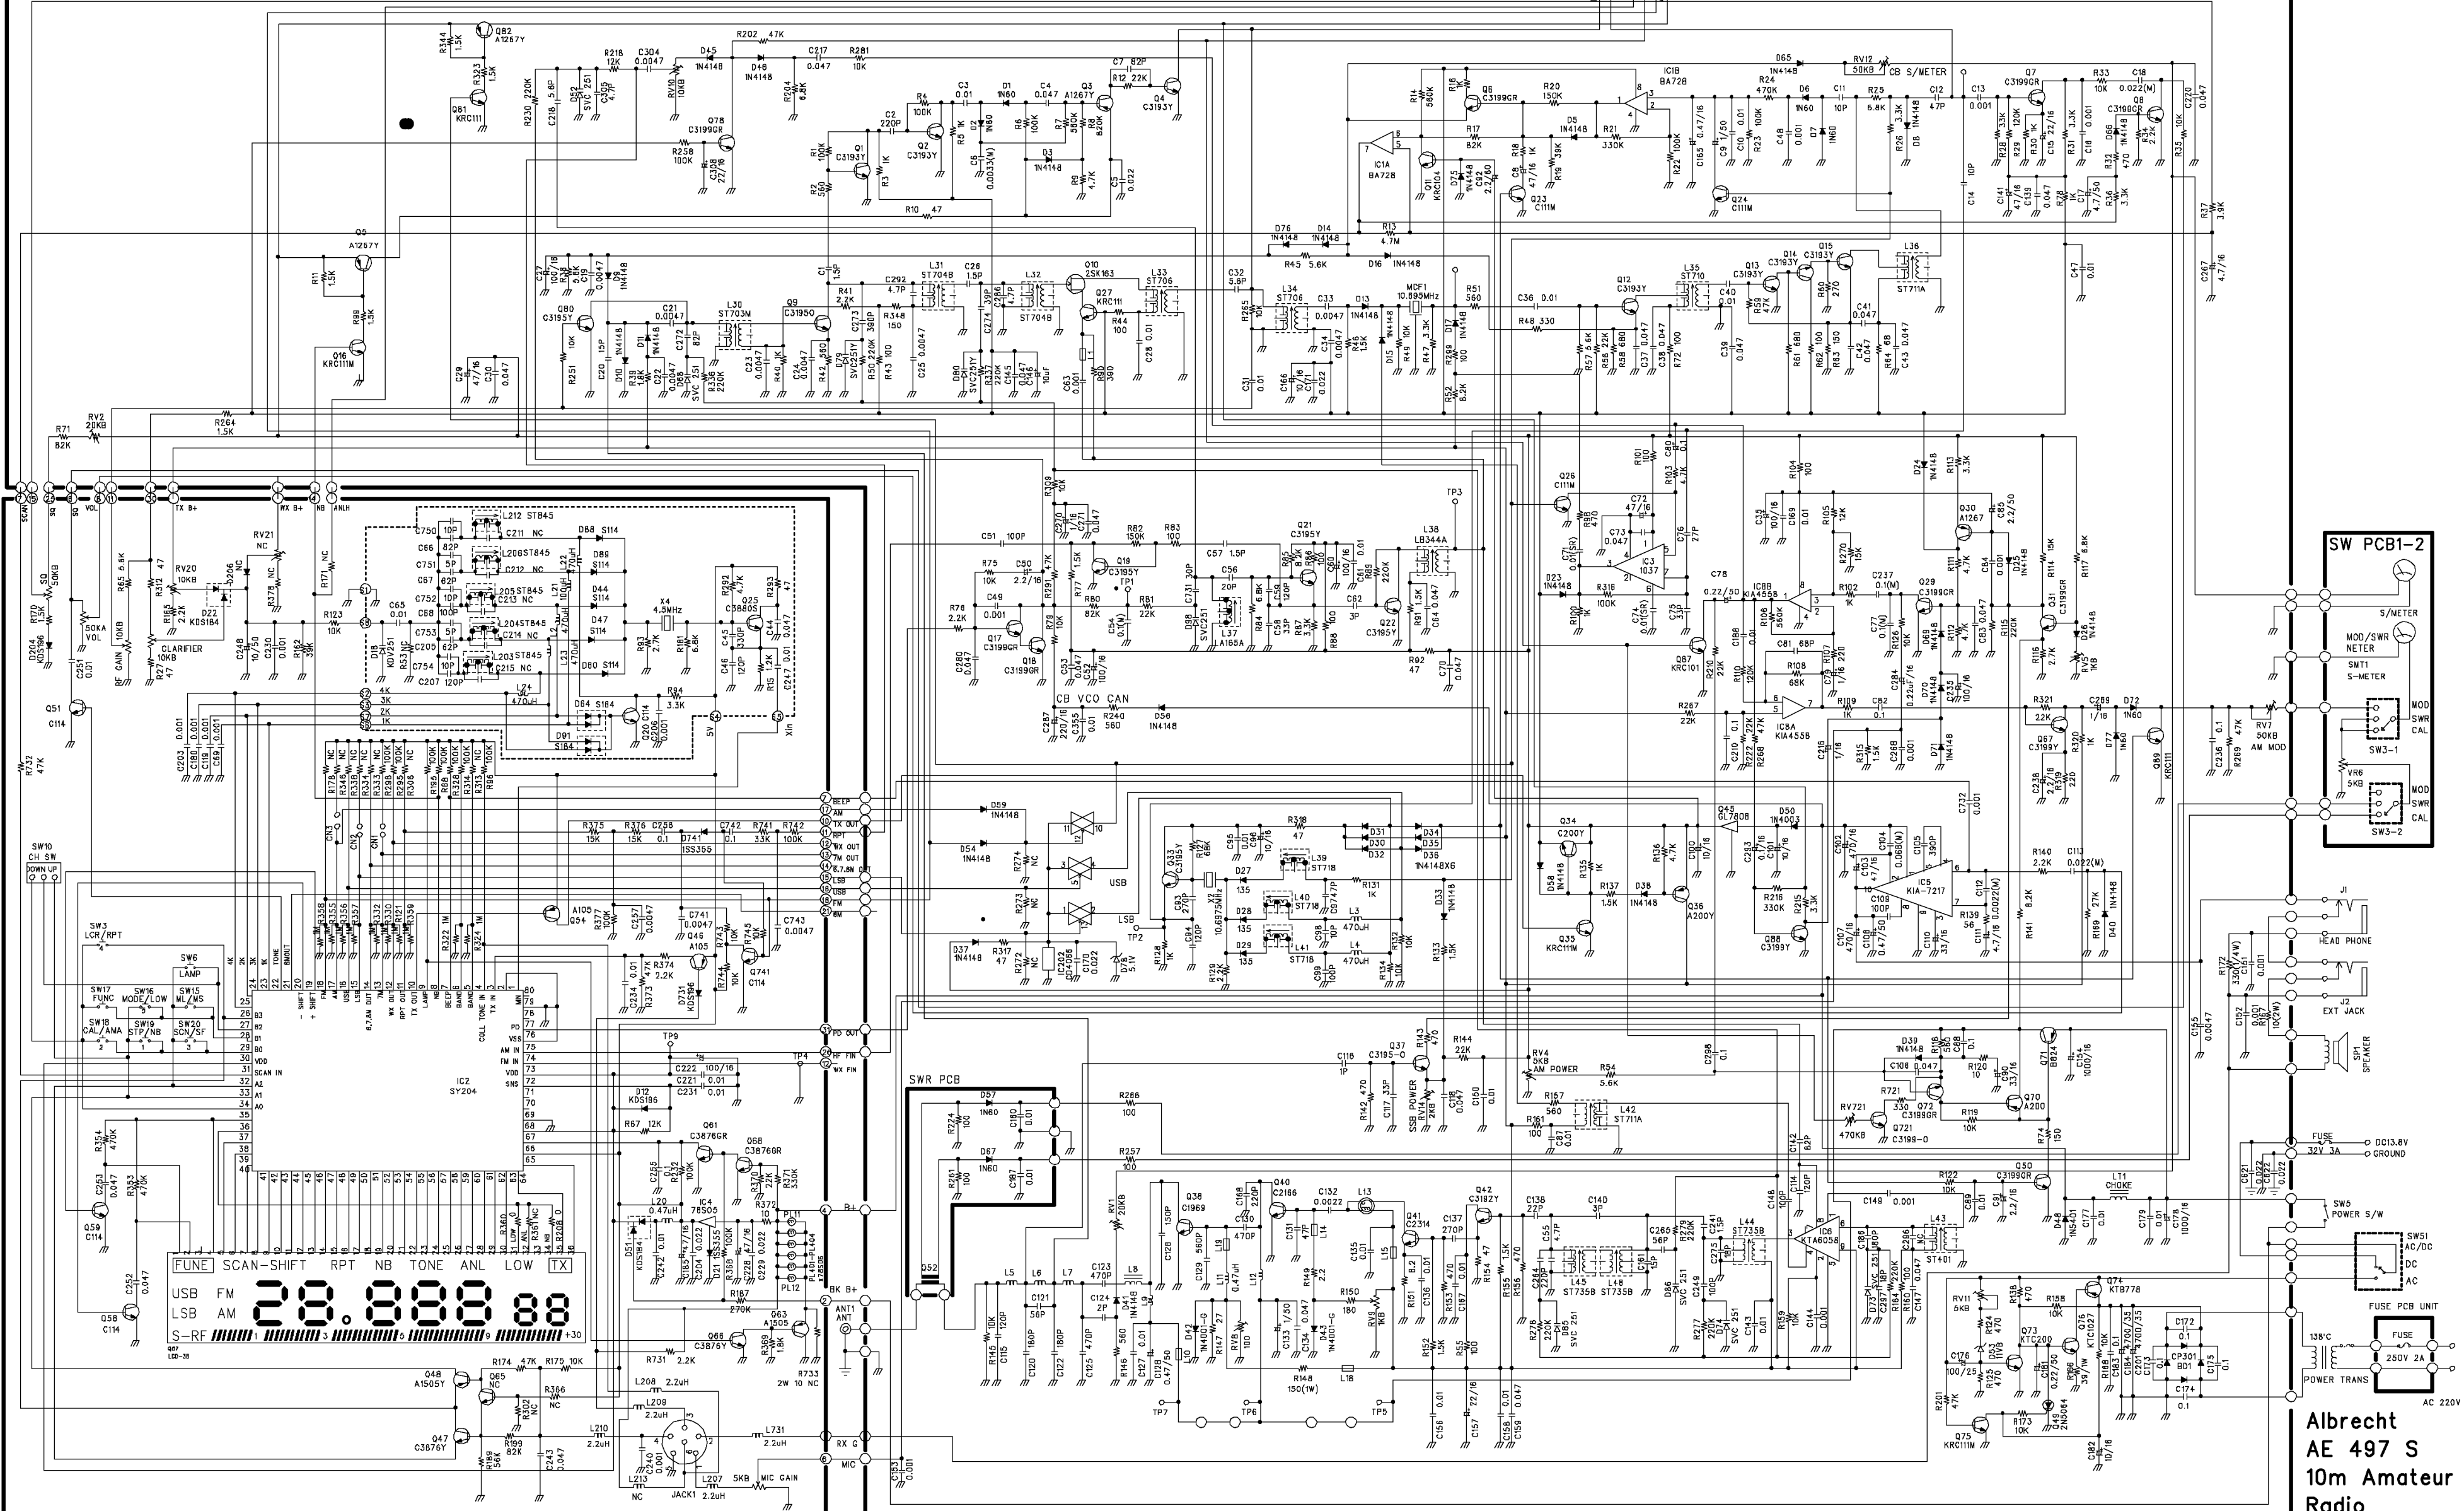

FM PCB

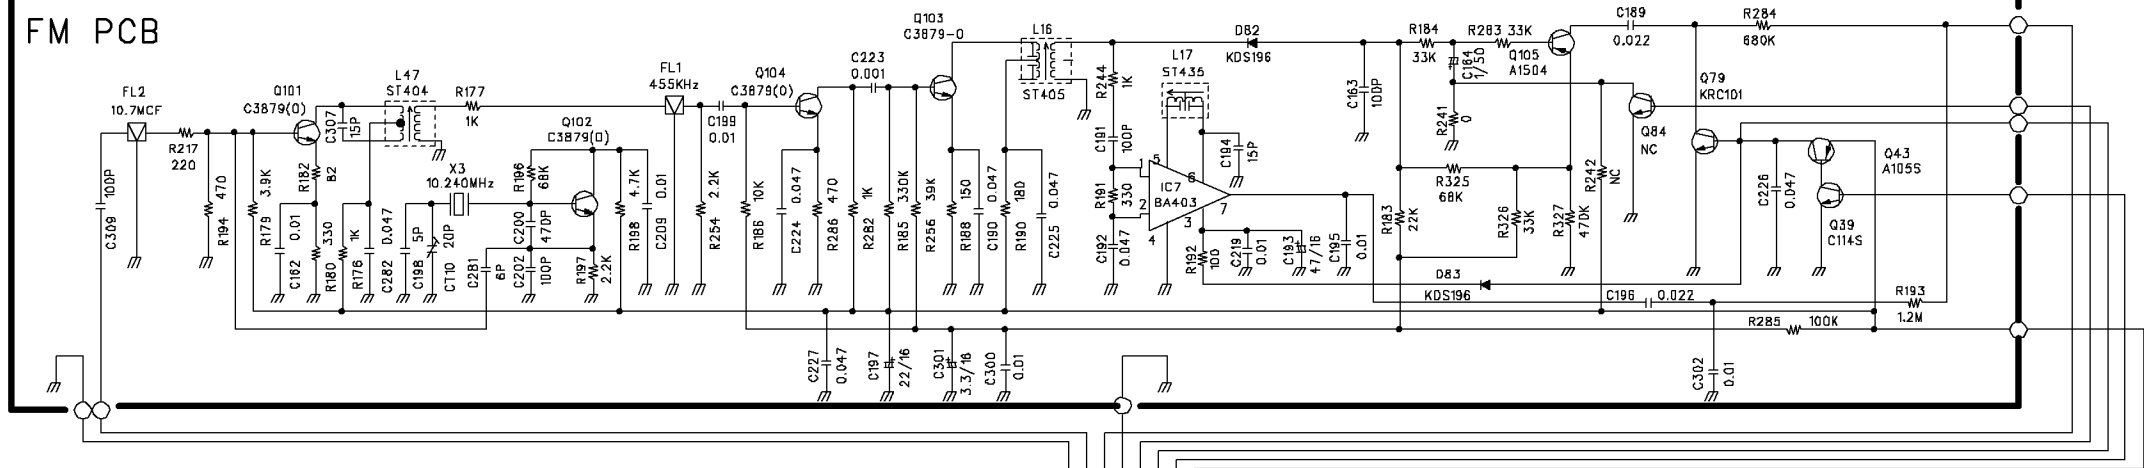

FUNE SCAN-SHIFT RPT NB TONE ANL LOW TX  
 USB FM 20.000 00  
 LSB AM  
 S-RF

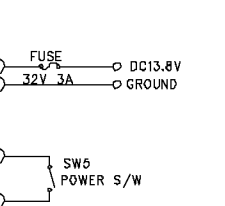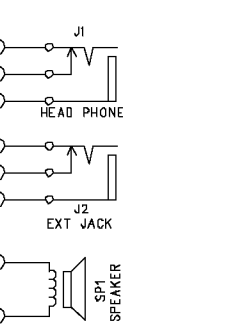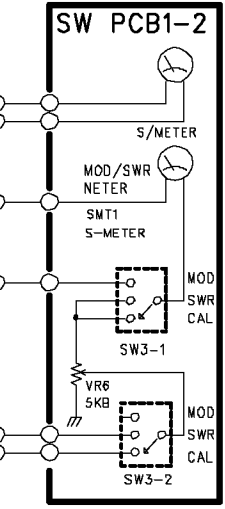

Albrecht  
 AE 497 S  
 10m Amateur  
 Radio