


SCHEMATIC DIAGRAM TV-2102, TV-2002, TV-1402 aiwa

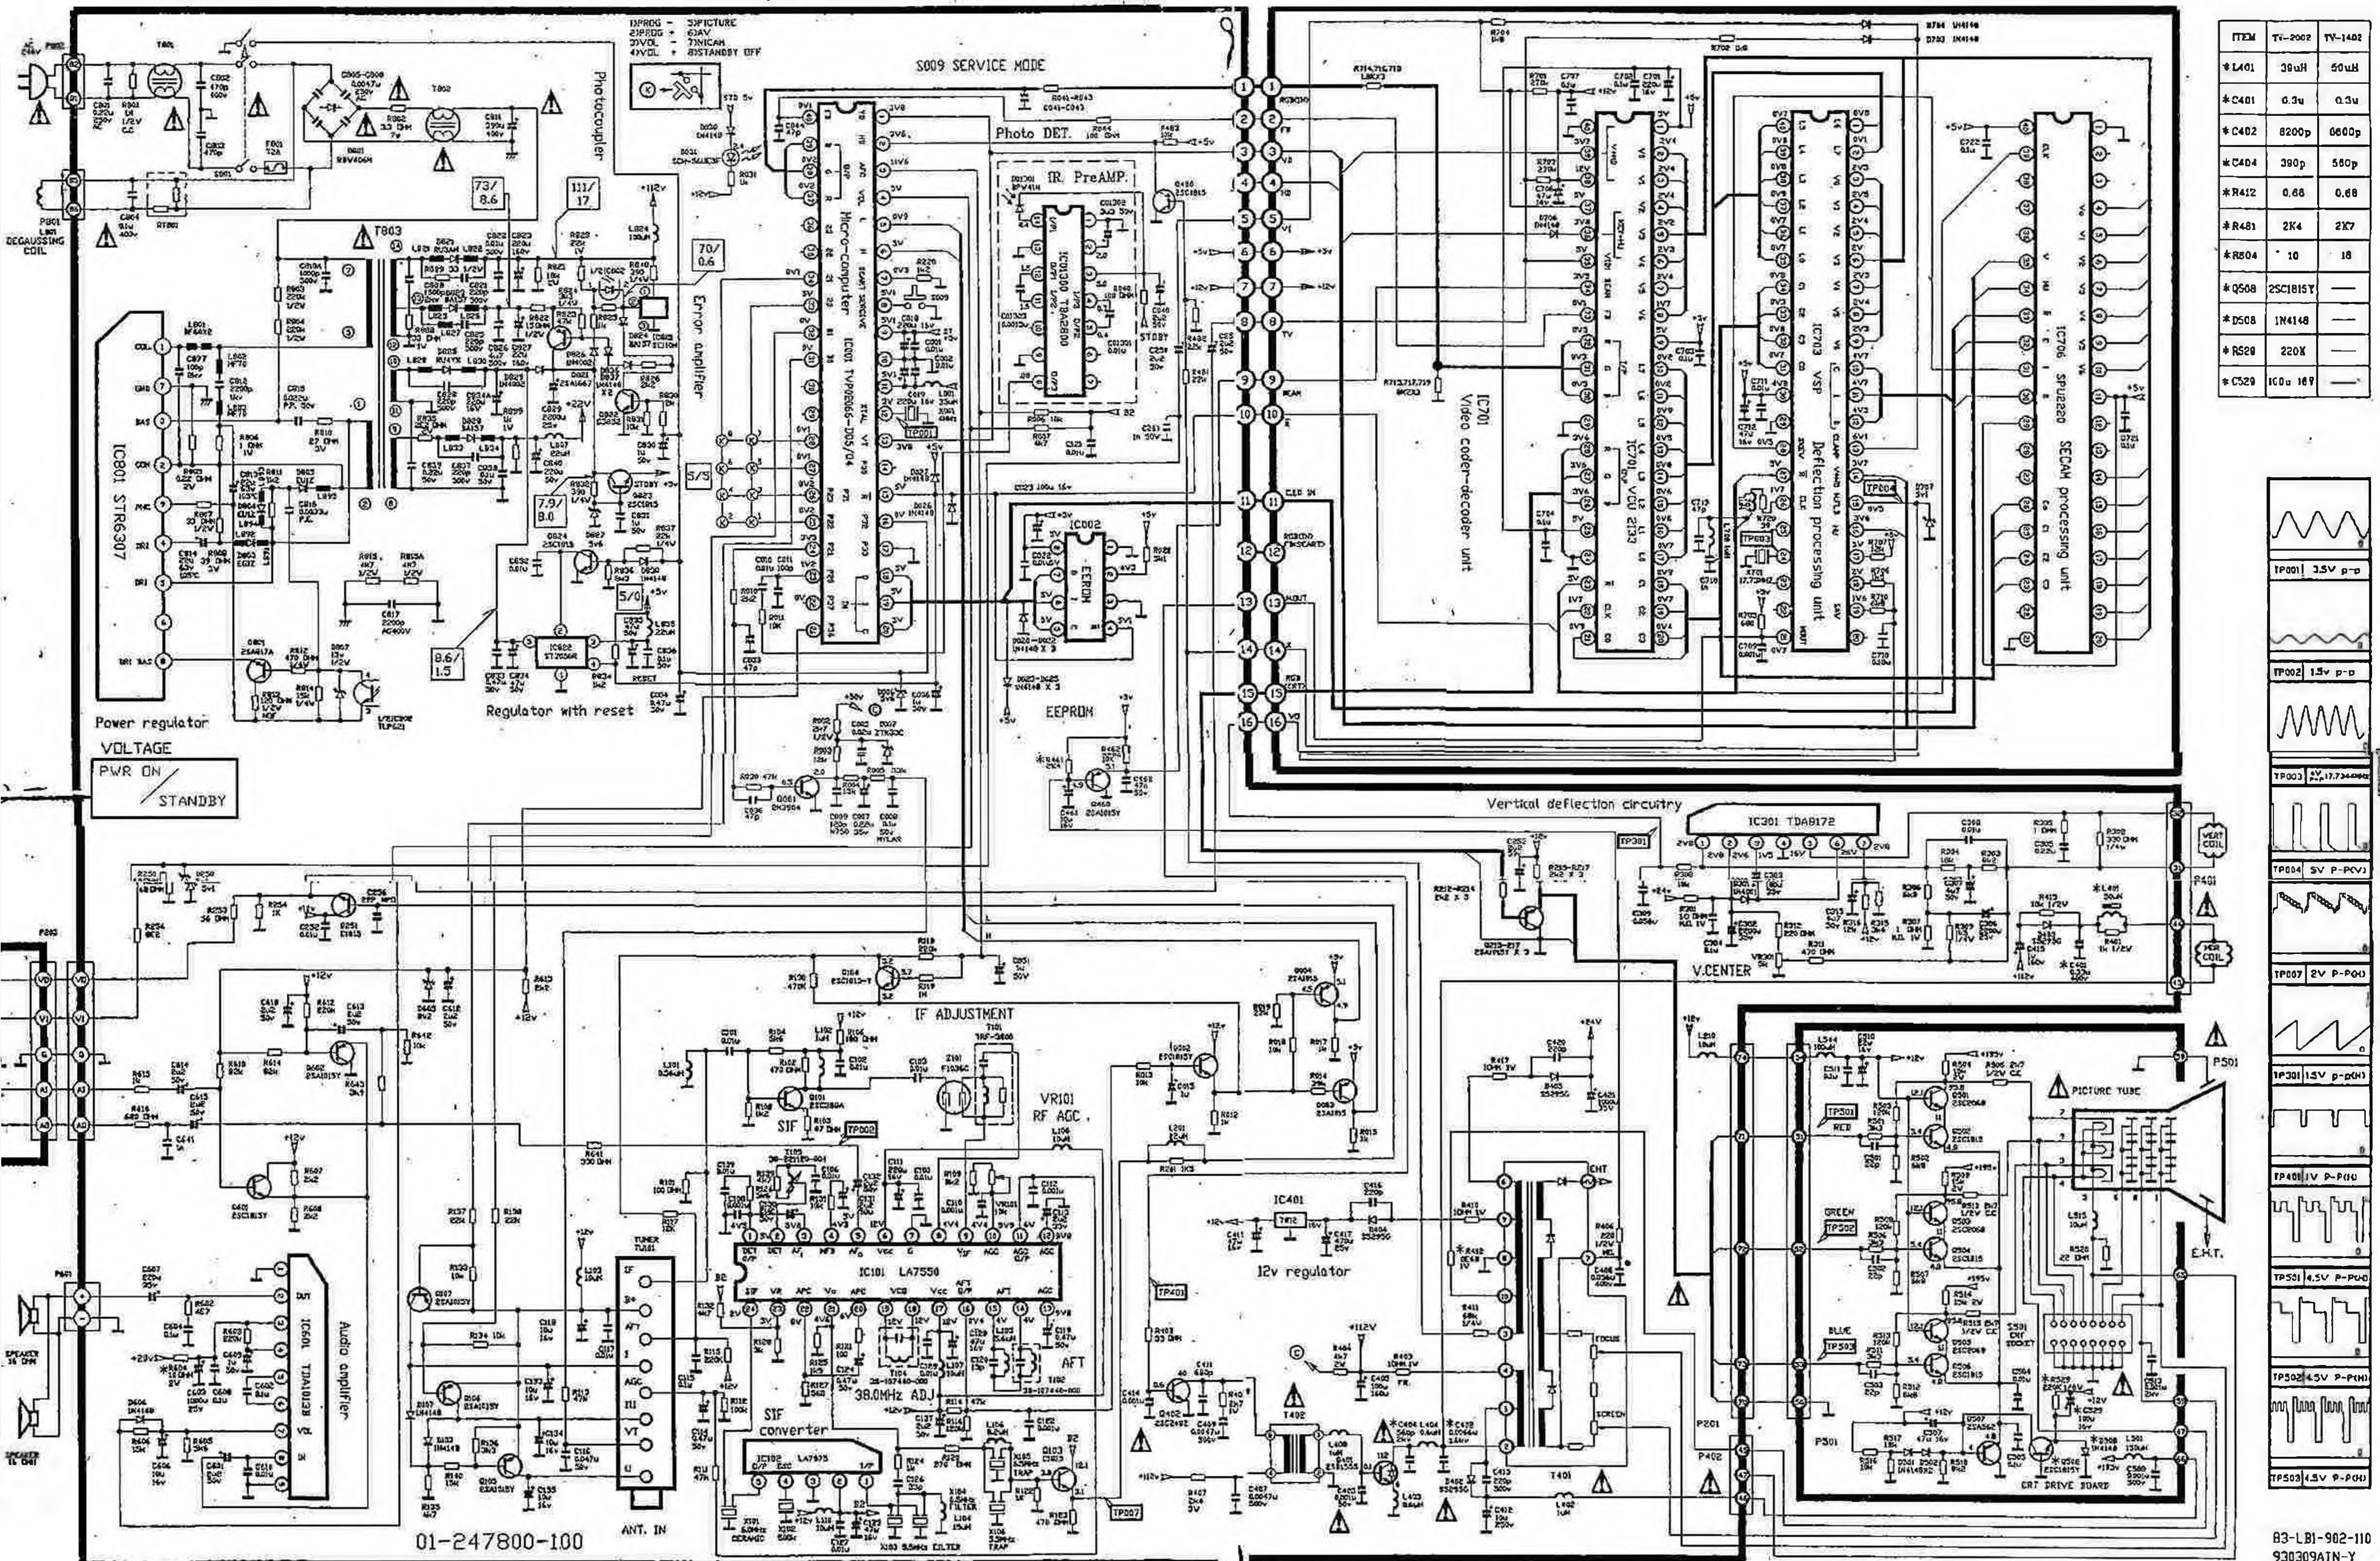

ITEM	TV-2002	TV-1402
*L401	30uH	50uH
*C401	0.3u	0.3u
*C402	8200p	6800p
*C404	390p	580p
*R412	0.68	0.68
*R481	2K4	2K7
*R504	10	18
*Q508	2SC1815Y	
*D508	1N4148	
*R520	220K	
*C520	1C0u 16V	

- TP001 3.5V p-p
- TP002 1.5V p-p
- TP003 2V 17.73kHz
- TP004 5V P-PCV
- TP007 2V P-POU
- TP301 1.5V p-p(H)
- TP401 1V P-P(U)
- TP501 4.5V P-P(U)
- TP502 4.5V P-P(H)
- TP503 4.5V P-P(U)

NOTE 1 : CIRCUIT CONSTANTS AND CIRCUIT ITSELF ARE SUBJECT TO BE CHANGED WITHOUT NOTICE.

NOTE 2 : REGARDING MODEL TV-2002 & TV-1402 THE CONSTANT OF THE PART-DEPENDENT NO. OF WHICH IS MARKED WITH "*" IS DIFFERENT FROM THE SCHEMATIC CIRCUIT DIAGRAM. PLEASE REFER TO THE TABLE AT THE UP-RIGHT CORNER.